


# Contents


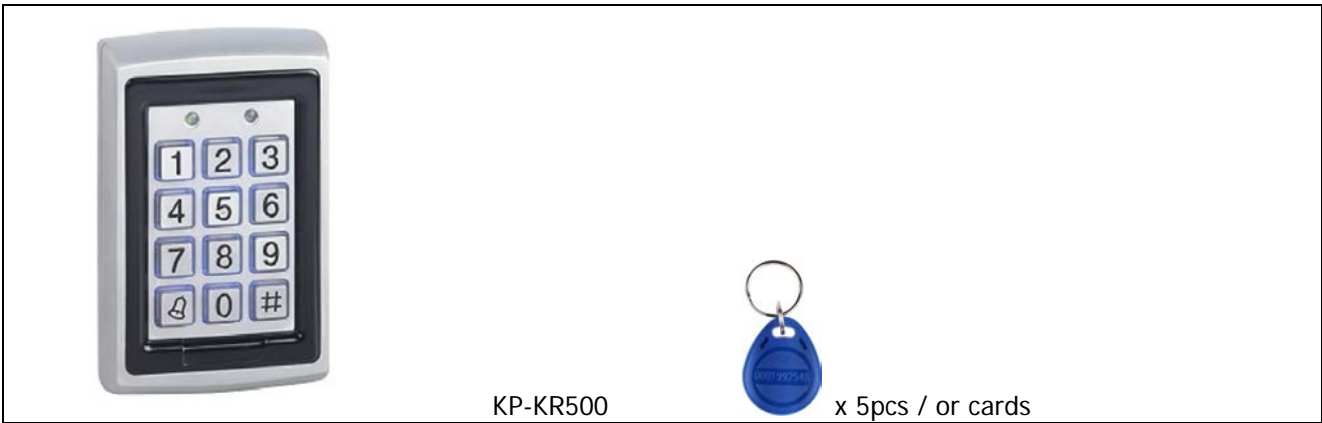


KP-KR500

x 5pcs / or cards

# Installation

- > Remove the back cover from the unit
- > Drill 3 holes (A, B, C) on the wall for the screws and one hole for the cable
- > Remove the supplied rubber bungs to the screw holes (A, B,C)
- > Fix the back cover firmly on the wall with 3 flat head screws
- > Thread the cable through the cable hole (D)
- > Attach the unit to the back cover

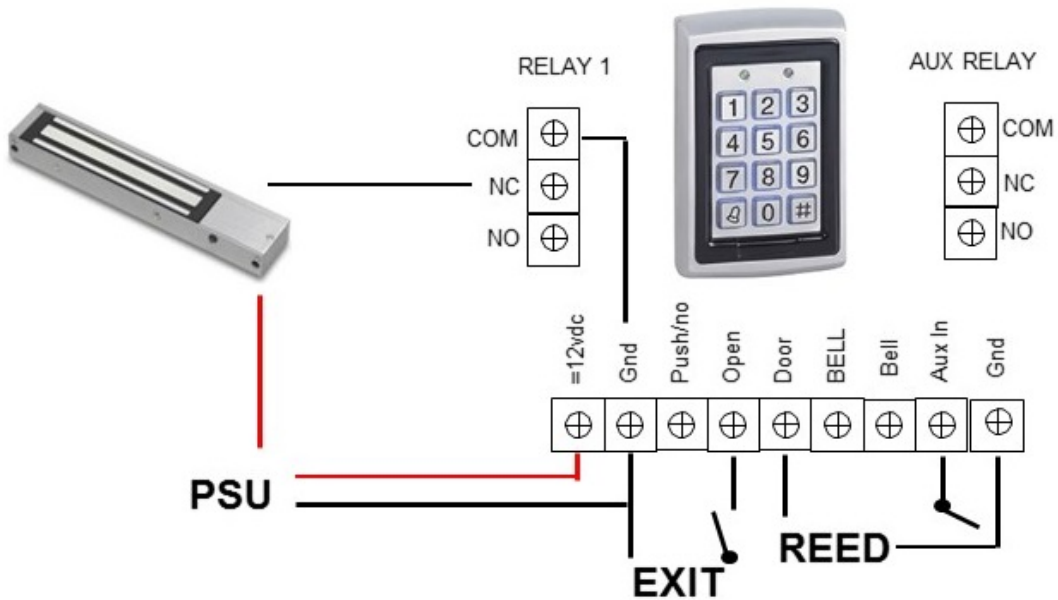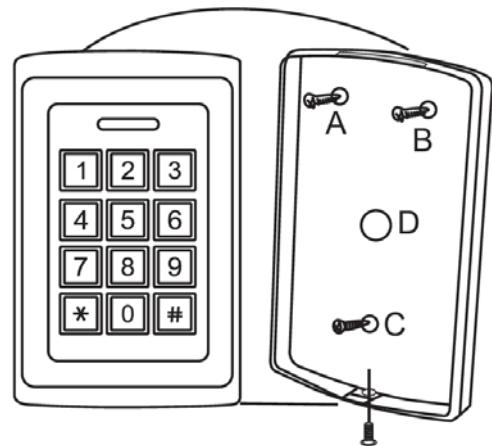

LOCKING TYPE - FAIL SECURE N/O contact is used on Relay 1 for fail Secure locking

EXIT BUTTON- N/O going Closed Contacts

BELL- N/O going closed when bell is pressed

DOOR- Reed switch must be N/C when door is closed, if left open alarm will sound when door sensor is enabled

AUX-IN - N/O going closed activates the AUX relay and sound alarm on connection